



# MC36




**Mobile Computer**

---

**Quick Start Guide**



# Features

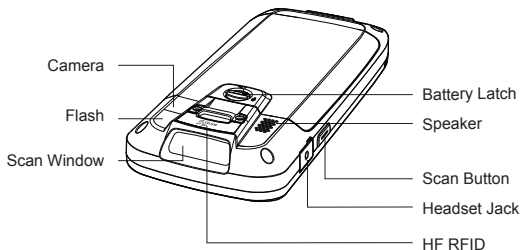

## Unpacking

The following items are in the box:

- MC36
- Lithium-ion battery (2,940 or 4,410 mAh)
- Quick Start Guide
- Regulatory Guide.

# Installing the SIM Card


**NOTE**

The MC36 accepts micro SIM cards. If using nano SIM cards, a third-party adapter is required.


**CAUTION**

For proper electrostatic discharge (ESD) precautions to avoid damaging the SIM card. Proper ESD precautions include, but not limited to, working on an ESD mat and ensuring that the user is properly grounded.



1. Turn the battery latch to unlock.

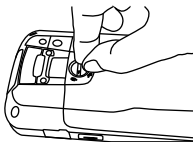



2. Place thumbnail at battery cover notch and lift the battery cover.

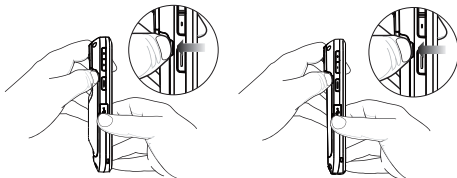

- Slide the SIM card holder toward the bottom of the MC36 to unlock.
- Lift the SIM door.
- Insert the SIM card with the cut edge and the contacts facing up.

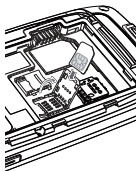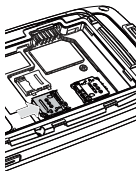

- Close the SIM card holder.
- Slide the SIM card holder toward the top of the MC36 to lock into place.

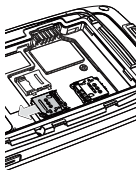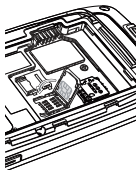

## Installing an Optional microSD Card





**NOTE** Supports up to 32 GB microSDHC cards.




### **CAUTION**

For proper electrostatic discharge (ESD) precautions to avoid damaging the SD card. Proper ESD precautions include, but not limited to, working on an ESD mat and ensuring that the user is properly grounded.

1. Slide the microSD card door toward the top of the MC36 to unlock.
2. Lift the SD card door.

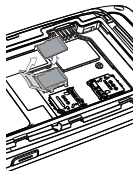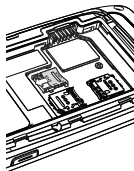


3. Align the microSD card with the card holder. Ensure that the contacts on the card are facing down and toward the card holder. Note the position of the card notch.
4. Insert the microSD card into the card holder.
5. Close the SD card door.
6. Slide the SD card door toward the bottom of the MC36 to lock into place.

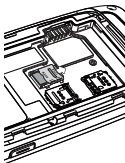


## Installing the Battery

1. Align the three tabs on the bottom of the battery with the three slots in the battery compartment.
2. Press the battery down and then rotate until it locks into place.

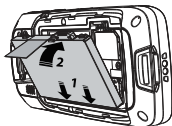

2,940 m A h

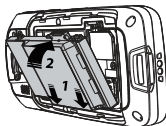


4,410 m A h


3. Align the two tabs on the bottom of the battery door with the two slots in the device.
4. Ensure that the battery door is seated properly and that no gaps are present.
5. Turn the battery latch to lock.



**NOTE** Battery door must be installed for MC36 to turn on.

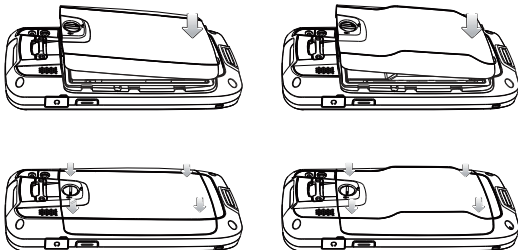


## Single Slot Cradle Setup

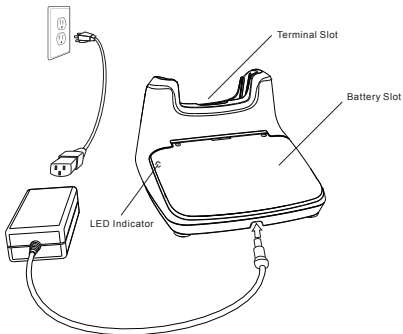

## Charge the MC36

1. Insert MC36 into terminal slot.

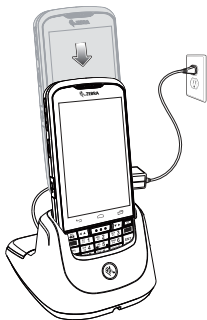

2. MC36 starts to charge automatically.

| LED                 | Description                                                            |
|---------------------|------------------------------------------------------------------------|
| Slow Flashing Green | MC36 is charging.                                                      |
| Solid Red           | Battery is in an extremely low power state (normal slow charging mode) |
| Solid Green         | MC36 is fully charged.                                                 |
| Fast Flashing Red   | Charging error.                                                        |
| Off                 | Not charging.                                                          |

## Spare Battery Charging

1. Lift the battery slot cover.
2. Place the battery into battery slot. Ensure that the three tabs on the bottom of battery aligned with the three slots in the battery slot.
3. Press the battery down until it locks into place. Close the battery slot cover.
4. Starts to charge automatically.

| LED          | Description            |
|--------------|------------------------|
| Solid Red    | MC36 is charging.      |
| Solid Green  | MC36 is fully charged. |
| Flashing Red | Charging error.        |


## Turning On the MC36

Press the Power button for at least one second to turn on the MC36.

## Replacing the 2,940 mAh Battery

To replace the 2,940 mAh battery:

1. Press the Power button until the menu displays.
2. Touch **Power off**.
3. Touch **OK**.
4. Turn the battery latch to unlock.
5. Place thumbnail at battery cover notch and lift the battery cover.

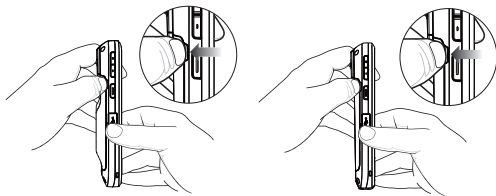





6. Pull the battery tab down at a 45° angle.



7. Remove the battery out of the battery compartment.  
8. Align the three tabs on the bottom of the replacement battery with the three slots in the battery compartment.  
9. Press the battery down and rotate until it locks into place.

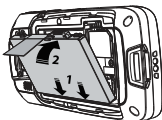

10. Align the two tabs on the bottom of the battery door with the two slots in the device.  
11. Ensure that the battery door is seated properly and that no gaps are present.

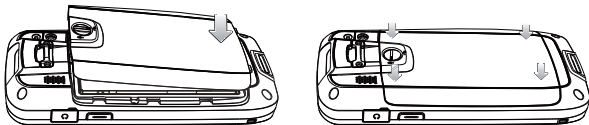


12. Turn the battery latch to lock.  
13. Press the Power button to turn on the MC36.


# Replacing the 4,410 mAh Battery

To replace the 4,410 mAh battery:


1. Press the Power button until the menu displays.
2. Touch **Power off**.
3. Touch **OK**.
4. Turn the battery latch to unlock.
5. Place thumbnail at battery cover notch and lift the battery cover.

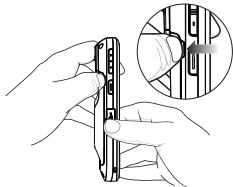


6. With two fingers, press the battery down.

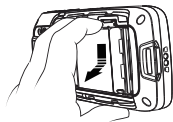

7. Rotate the battery out of the compartment.
8. Align the three tabs on the bottom of the replacement battery with the three slots in the battery compartment.
9. Press the battery down and rotate until it locks into place.

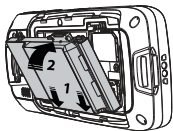

 10. Align the two tabs on the bottom of the battery door with the two slots in the device.
11. Ensure that the battery door is seated properly and that no gaps are present.




12. Turn the battery latch to lock.
13. Press the Power button to turn on the MC36.

## Data Capture

To capture bar code data using the linear imager or 2D imager (on optional configurations):

1. Open an application and ensure that a text field is in-focus.
2. Press and hold the scan button.

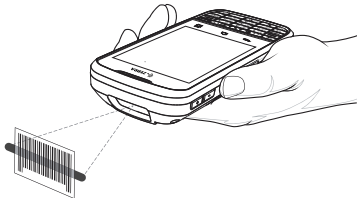

3. Place the red aiming pattern across the bar code or the aiming dot on the bar code. The LED lights green and a beep sounds, by default, to indicate the bar code was decoded successfully.
4. The captured data appears in the text field.

## Get More Information

Go to <http://www.zebra.com/support> to view the *MC36 User Guide and MC36 Integrator Guide*.

Zebra reserves the right to make changes to any product to improve reliability, function, or design.

Zebra does not assume any product liability arising out of, or in connection with, the application or use of any product, circuit, or application described herein.

No license is granted, either expressly or by implication, estoppel, or otherwise under any patent right or patent, covering or relating to any combination, system, apparatus, machine, material, method, or process in which Zebra products might be used. An implied license exists only for equipment, circuits, and subsystems contained in Zebra products.



Zebra Technologies Corporation  
3 Overlook Point  
Lincolnshire, IL 60069 U.S.A.  
<http://www.zebra.com>

Zebra and the stylized Zebra head are trademarks of ZIH Corp., registered in many jurisdictions worldwide. All other trademarks are the property of their respective owners.

©2015 ZIH Corp and/or its affiliates. All rights reserved.



MN002255A01 Rev. A - September 2015

